

# SARGENT & GREENLEAF, INC.

1 SECURITY DRIVE • NICHOLASVILLE, KENTUCKY 40356

TELEPHONE: (606) 885-9411

TELEX: 21-8459



## SWITCH LOCK WIRING INSTRUCTIONS

R6738-1 (Three Wheel) & R6739-1 (Four Wheel)

**DURESS ALARM:** ( Switch 1 ) INSTALLED WITH ALL FOUR (4) SERIES

To open the lock and trigger the silent duress alarm, add 10 digits to the first number of the combination when dialing. For example, if the combination is set on 50-25-50, dial 60-25-50 to activate the silent duress alarm. The lock will allow a normal entry while triggering an alarm in the monitoring station.

Switch is located on the side of the lock body nearest the container.

### WIRING:

**NORMAL CLOSED ALARM LOOP:**

Connect wires in series to terminals "C" and "NO"  
( SEE ILLUSTRATION )

**NORMAL OPEN ALARM LOOP:**

Connect wires in series to terminals "C" and "NC"  
(SEE ILLUSTRATION)

**LOW VOLTAGE APPLICATIONS:**

When powering a light, annunciator, relay, etc., connect wires in series to terminals "C" and NC"

