

# Titan Battery Change

## Step 1:

To change the battery, pull the keypad tab out slightly and turn the keypad right counterclockwise. The keypad will pull out from the base far enough to reveal the battery and battery connector.

## Step 2:

Pull battery from keypad and unplug from battery cable. Plug in new Duracell battery and push battery into keypad

## Step 3:

Push the keypad right back against the base and turn it clockwise until it clicks into place. Test the lock function at least three times with the door open before closing safe

