



PLACE THE LOCK WASHER (2) AND THE FLAT STEEL WASHER (3) OVER THE ATTACHING SCREW (1). INSERT THE ATTACHING SCREW THROUGH THE HOLE IN THE TIMELOCK BASE FROM THE INSIDE. INSTALL THE STEEL SPACER (4) OVER THE ATTACHING SCREW FROM THE OUTSIDE OF THE TIMELOCK BASE. PLACE THE STEEL PLATE (5) OVER THE THE STEEL SPACER. SLIDE THE RUBBER WASHER (6) OVER THE STEEL SPACER. TO RETAIN THESE COMPONENTS DURING INSTALLATION, PRESS THE CARDBOARD WASHER (7) OVER THE END OF THE ATTACHING SCREW UNTIL IT CONTACTS THE RUBBER WASHER. REPEAT THIS PROCEDURE FOR THE OTHER ATTACHING SCREWS.

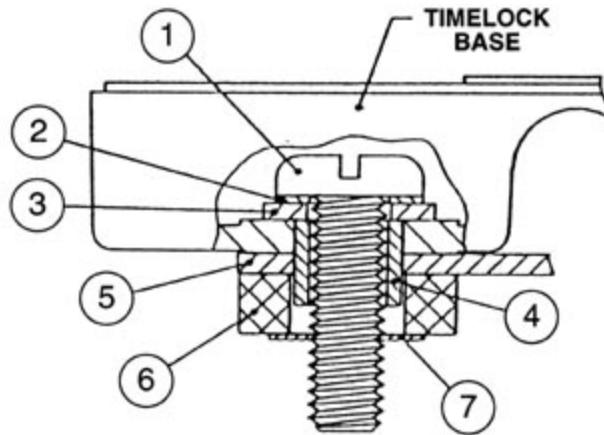

1 SLOTTED PAN HEAD SCREW
5/16-18 X 1" LONG

2 LOCK WASHER 

3 FLAT STEEL WASHER 

4 STEEL SPACER

5 STEEL PLATE 2.75" X 4.0"

6 RUBBER WASHER 

7 CARDBOARD WASHER 